



# CORDLESS HAIR CUTTER

Model: PP2038




45 Mins  
Continual cutting



Stainless Steel  
Blades



Skin Friendly

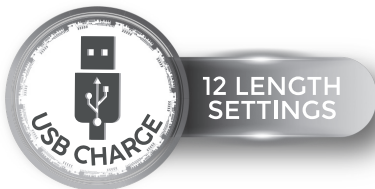

THIS IS HOME TRULY

# PARTS & DESCRIPTION

## LIST OF COMPONENTS

1. Blade
2. Guide Comb
3. Guide Comb Regulator
4. ON/OFF Switch
5. USB Cable
6. Cleaning Brush
7. Oil
8. USB Port



Cleaning Brush



Oil



USB Cable



## WARNINGS

### ATTENTION :

Read this booklet carefully as it contains important instructions for a safe installation, use and maintenance.

Important instructions to be kept for future reference.

The following basic precautions should always be followed when using electrical appliances:

1. Read all instructions before using the appliance.
2. This appliance must be used only for the purpose it was expressly designed; any use NOT complying with the instructions contained in the manual is considered inappropriate and dangerous. The manufacturer is NOT responsible for possible damages caused by the inappropriate and/or unreasonable use.
3. This appliance is NOT suitable to be used or stored near heat sources (open flame, ovens, heaters, stoves, etc.) and/or in an explosive environment (in the presence of flammable substances such as gas, vapour, mist or dust, in atmospheric conditions when, after ignition, the combustion is spread in the air). Items containing these substances should never be placed in the appliance, and never be used to clean the appliance in order to avert the risk of fire or explosion.
4. The packing materials (plastic bags, expanded polystyrene, etc.) must be kept out of the reach of children or disabled persons since they represent potential sources of danger.
5. The installation/assembly of the appliance will be made in accordance with the indications of the manufacturer. A wrong procedure may cause damages to persons, animals or objects, for which the manufacturer cannot be considered responsible.
6. Before use, check the integrity of the appliance and USB cable. DO NOT pull, twist or bend the USB power cable, nor place heavy objects on it. DO NOT use a power cable that is worn or frayed, or if the B connector of the USB power cable (downstream end) does not fit snugly into the port on the appliance. If the USB cable is damaged, it must be replaced by the manufacturer or its service agent or a qualified technician in order to avoid a shock hazard.
7. Before powering the appliance make sure the rating (voltage and frequency) corresponding to the grid and the socket is suitable for the USB cable, and that the wall socket is properly grounded.
8. DO NOT power the appliance using multiple sockets. If possible, avoid the use of adapters and/or extension cables; if their use is absolutely necessary, use only materials in compliance with the current safety regulations and according to the electrical parameters of the adapters.
9. The appliance must NOT be switched on using external timers and/or other remote control appliances which are not specified in this manual.
10. Only use original components & accessories provided by the manufacturer. Any non-original components & accessories NOT recommended by the manufacturer may cause injuries to persons or damage to the appliance. Doing so will void the warranty and may cause serious injury.

11. If you are using the appliance for the first time, you should:
  - a. Fully charge the appliance for 16 hours. Subsequently, the charging process should last for 8 hours. Charge, use and store the dry appliance between 15°C (59°F) and 35°C (95°F). DO NOT charge or store the appliance in the bathroom or near water sources, nor use the appliance whilst it is being charged.
  - b. Ensure that the appliance is switched off before charging the appliance. Insert the 'B' connector of the USB power cable into the port of the appliance, and the 'A' connector of the USB power cable to the charging port of an external charger or computer. Disconnect the appliance when the Indicator light changes colour.
  - c. Ensure that the appliance is switched off before cleaning the appliance and accessories with a wet cloth mixed with some detergent.  
DO NOT use metal scouring pads.  
DO NOT clean any part of the appliance in the dishwasher.  
Make sure to remove any label or protective sheet which may prevent its proper functioning.
- DO NOT:**
  - use the appliance to trim artificial hair or animal hair;
  - use the appliance on skin that is wounded, sunburnt, cut or blistered;
  - use the appliance in an inverted position as it may cause the Blade to cut too deep, leading to injury;
  - cover the appliance during functioning;
  - place the appliance in the microwave or conventional oven, or pour boiling water over any part of the appliance in order to sterilise it;
  - insert objects or body parts inside the protection cover of the appliance;
  - touch the Blade with your fingers or any utensil while the appliance is operating to avoid personal injury or damage to the appliance;
  - operate the appliance for more than 2 minutes without interruption. Let the appliance rest for 1 minute between processing cycles. After 3 processing cycles, allow an interval of 10 minutes to let the appliance cool down before the next use, so as to prolong its service life. DO NOT allow the appliance to idle while in operation;
  - press the ON/OFF Switch too forcefully;
  - leave the appliance unsupervised during operation.
12. During operation, DO NOT use the appliance whilst showering or touch the appliance with wet body parts, and it is recommended to have between you and the standing surface, an isolating element (for example, wearing shoes with rubber soles).
13. DO NOT immerse the appliance, excluding the Blade and the Guide Comb, in water or other liquids, wash it under the tap, or let any liquid flow into the internal casing of the appliance to prevent electric shock. The Blade and the Guide Comb can be rinsed under running water. DO NOT clean any part of the appliance in the dishwasher. In case of accidental fall in water, DO NOT attempt to remove it from the water, but first of all unplug immediately the 'A' connector of the USB power cable to the charging port of the external charger or computer.
14. Avoid placing the appliance or USB cable on abrasive or sharp surfaces or in positions where it can be damaged easily. The cable must NOT be placed under carpets, or covered with throw rugs, runners or similar. Arrange the cable away from the high traffic area, and where it will NOT be tripped over.

15. Always remember to unplug the USB cable of the appliance after charging, before storing, using, cleaning or performing any maintenance operation.
16. Avoid carrying out operations which are NOT specified in this manual (such as disassembling and/or altering).
17. In case of malfunction or anomaly during the functioning, switch off the appliance immediately and check the cause of the anomaly, if possible, with the support of a qualified person.
18. If smoke is observed coming out of the appliance, switch off the appliance immediately. Let the appliance and its contents cool before attempting to remove the Blade and the Guide Comb out of the appliance.
19. This appliance is NOT intended for commercial use but to be used in households and similar applications, such as:
  - Staff kitchen areas in shops, offices and other working environments;
  - Dormitories;
  - By clients in hotels, motels and other residential environments;
  - Bed and breakfast type environment
20. DO NOT use or store the appliance outdoors. Store and use the appliance only indoors, or in any case, protected from weathering such as rain, direct radiation of the sun and dust.
21. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall NOT play with the appliance. Cleaning and user maintenance shall NOT be made by children unless they are older than 8 and supervised. Keep the appliance and its cable out of reach of children less than 8 years old.
22. Save these instructions

## HOW TO USE

### Charging the appliance

1. DO NOT charge or store the appliance in the bathroom or near water sources.
2. DO NOT charge the appliance at temperatures lower than 0°C (32°F) or higher than 40°C (104°F), in direct sunlight or near heat sources. Charge, use and store the appliance between 15°C (59°F) and 35°C (95°F). Ensure that the appliance is dry before charging it.
3. DO NOT use the appliance when it is being charged.
4. For the first use, please fully charge the appliance for 16 hours prior to using it. If the appliance had not been used for a period of 3 months or more, do likewise. Subsequently, the charging process should last for 8 hours.
5. Ensure that the appliance is switched off before charging the appliance. Insert the 'B' connector of the USB power cable (downstream end) into the port at the bottom of the appliance, and the 'A' connector of the USB power cable (upstream end, which is rectangular in shape) to the charging port of an external charger or computer, which is connected to the electric mains. A red light indicates that charging is in progress. After the appliance is fully charged, the red light turns blue. DO NOT disconnect the appliance until the Indicator light changes colour.
6. DO NOT use a power cable that is worn or frayed, or if the B connector of the USB power cable (downstream end) does not fit snugly into the port on the appliance.
7. DO NOT pull, twist or bend the USB power cable, nor place heavy objects on it.
8. The appliance can be used for up to 45 minutes after being fully charged. However, to preserve and extend the life of the battery, it is recommended that after approximately 35 minutes, when you feel that the power is waning, charge the appliance before the appliance completely shuts off. It takes 8 hours for a full charge.

### Using the appliance

9. Clean the appliance and accessories before using. Refer to the section "How to clean and maintain" immediately following this section.
10. DO NOT use the appliance whilst showering or next to a running tap.
11. The appliance should NOT be used to trim artificial hair or animal hair.
12. Remove the Guide Comb from the appliance by sliding it up (see pictures under the heading "To Remove and Attach the Guide Comb").
13. The Blade has fixed life. In order to obtain the best result, please replace the Blade regularly. Apply oil to the Blade prior to each use. Using a blunt, deformed or damaged Blade may result in skin irritation or injury.
14. Attach the Guide Comb to the appliance before use. Adjust the height of the Guide Comb using the Guide Comb Regulator by turning it clockwise or anti-clockwise to the level of trim you desire.
15. DO NOT use the appliance in an inverted position. This may cause the Blade to cut too deep, and may lead to injury. Although this is NOT recommended, using the appliance without the Guide Comb attached will trim hair length to approximately 0.4 mm.

16. Press the ON/OFF Switch to turn on the appliance. When trimming is completed, press the ON/OFF Switch again. DO NOT leave the appliance in an idle mode for too long.
17. DO NOT operate the appliance for more than 2 minutes without interruption. Let the appliance rest for 1 minute between processing cycles. After 3 processing cycles, allow an interval of 10 minutes to let the appliance cool down before the next use, so as to prolong its service life. DO NOT allow the appliance to idle while in operation.
18. Keep the appliance out of reach of children.

### **Safety Protection**

If the appliance overheats, the thermal switch will be activated, leading to the motor being shut off. Press the ON/OFF Switch OFF. Allow the appliance to cool for at least 15 minutes before using the appliance.

## HOW TO CLEAN AND MAINTAIN

### Cleaning the appliance

1. Press the ON/OFF Switch to turn OFF the appliance. Remove the power cable from the appliance (if attached). DO NOT clean the appliance while it is being charged.
2. Remove the Guide Comb from the appliance by sliding it up (see pictures under the heading "To Remove and Attach the Guide Comb"). You can clean the Guide Comb with detergent and rinse it under running water. Dry the Guide Comb before re-attaching it to the appliance.
3. Clean the Blade immediately after using the appliance. To remove the Blade (after removing the Guide Comb), hold the appliance and press your thumb against the flat section of the Blade and push upwards. You can rinse the Blade under running water. Refer to the pictures on how to clean the Blade using the Cleaning Brush.
4. If the exterior of the appliance is sticky, you can apply a proper amount of detergent and clean it with a soft wet cloth. DO NOT use cleaners or chemical substances. Wipe the appliance's surface with a dry cloth, Please dry or air dry the Blade after cleaning, and then re-attach the Blade in the appliance. DO NOT use blowers, hairdryers or other dry heat exchanges.
5. DO NOT immerse the appliance, excluding the Blade and the Guide Comb, in water or other liquids, wash it under the tap, or let any liquid flow into the internal casing of the appliance to prevent electric shock. The Blade and the Guide Comb can be rinsed under running water. DO NOT clean any part of the appliance in the dishwasher. In case of accidental fall in water, DO NOT try to take it out, but first of all unplug immediately the 'A' connector of the USB power cable to the charging port of the external charger or computer
6. The Blades are sharp. DO NOT touch the Blades with your fingers to avoid personal injury.
7. DO NOT attempt to sterilise any part of the appliance at high temperatures as the plastic may deform.

### To Remove and Attach the Guide Comb

To remove the Guide Comb, slide it out of the appliance in the direction shown

To Attach the Guide Comb, slide it into the appliance in the opposite direction






## To Remove and Attach the Blade

To remove the Blade, press your thumb against the flat section of the Blade and push upwards in the direction shown (picture on the left)

The Blade should detach as shown (picture on the right)

To attach the Blade, slide (1) under (2) and press downwards

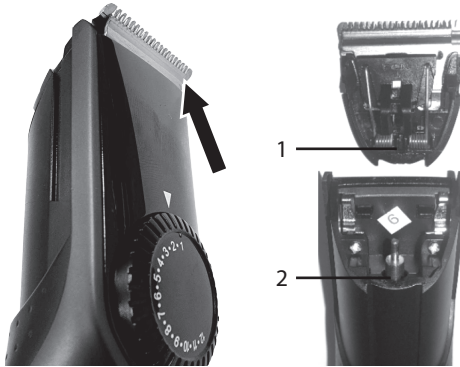


## To move the 2 set of teeth of the Blade slightly apart for cleaning

To push the 2 sections of Blade teeth slightly apart, holding the Blade, press your thumb against the wedge

The 2 sections of Blade teeth should move slightly apart, as shown (pictures at right)

Once the 2 sections are slightly apart, the Cleaning Brush can be used to remove hair and dust from the Blades.

Oil the 2 sections of the Blade after cleaning.

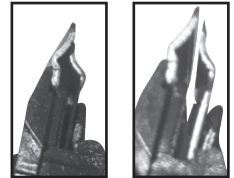


## How to Cut

Use the Guide Comb of the longest length the Guide Regulator allows if you are inexperienced in using the appliance.


1. To cut hair in the region: Nape of the Neck

Set the Comb length between 3 – 6 mm. Hold the appliance with the Blade teeth pointing upwards. Begin at the centre of the head at the base of the neck. Slowly lift the appliance as you work upwards and outwards through the hair, trimming a little at a time.

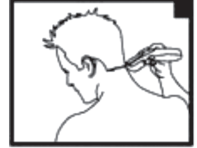

2. To cut hair in the region: Back of the Head

Set the Comb length to 12 mm. Trim the hair at the back of the head.

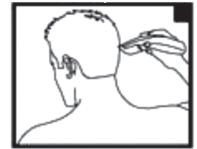

3. To cut hair in the region: Side of the Head

Set the Comb length between 3 – 6 mm and trim sideburns. Thereafter, set the Comb length to 12 mm and continue on to the top of the head. Repeat on the side.



4. To cut hair in the region: Top of the Head

Set the Comb length to 12 mm and cut the hair on the top of the head against the direction of hair growth. To retain long hair, remove the Guide Comb from the appliance. Lift the hair on top of the head with a normal hand comb, and cut the hair over the comb. You can also use your fingers to lift the hair and cut it to the desired length. Always work from the back of the head upwards to the top of the head.



5. To cut hair in the region: All parts of the head – the Finishing Touches

Remove the Guide Comb from the appliance. Carefully trim the hair all around the head evenly.



## ENVIRONMENTAL TIP

This device, along with all other electronic devices, should, when it is no longer capable of functioning, be disposed with the least possible environmental damage according to the local regulations in your area. In most cases you can discard the device at your local recycling center.

**DISPOSAL:** Do not dispose this device as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.

## WARRANTY

The manufacturer provides warranty in accordance with the legislation of the customer's own country of residence, with a minimum of 1 year, starting from the date on which the appliance is sold to the end user.

The warranty covers defects in material and workmanship.

The repairs under warranty may only be carried out by an authorised service centre.

When making a claim under the warranty, the original bill of purchase (with purchase date clearly indicated) must be submitted.

The warranty will not apply in cases of:

- normal wear and tear
- if the steps (as laid out in the section regarding Warnings) have not been observed e.g. overloading of the appliance, use of non-approved accessories
- if the appliance has not been properly maintained, if force has been used against it or if it has been damaged in any other way
- damage caused by non-observance of the user manual or non-compliance with the installation instructions
- errors or faults owing to defects in the distribution system
- if the appliance has been repaired or modified or changed in any way or by any person not properly authorised

## SPECIFICATION

MODEL	VOLTAGE	POWER
PP2038	220-240V ~ 50/60Hz	3 W, 2X NI-MH 600 mAh



## PowerPac Electrical Pte Ltd

✉ [sales@powerpac.com.sg](mailto:sales@powerpac.com.sg)  PowerPacSg

 [www.powerpac.com.sg](http://www.powerpac.com.sg)  @PowerPac4