



2IN1 USB CLIP & DESK FAN

Model: PPUF221



PowerPac Electrical Pte Ltd

✉ sales@powerpac.com.sg

📘 PowerPacSG

🌐 www.powerpac.com.sg

🎵 @powerpacsg




WE ARE OFFERING A
15% OFF STOREWIDE FOR
YOUR NEXT PURCHASE AT
WWW.POWERPAC.COM.SG

CODE
THANKYOU15

PARTS & DESCRIPTION

LIST OF COMPONENTS

1. Fan Blade
2. Front Grille Speed Switch
3. Back Grille
4. Fan Head (containing Motor)
5. Main Body screw
6. Clip
7. Clip screw
8. Base
9. USB Cable

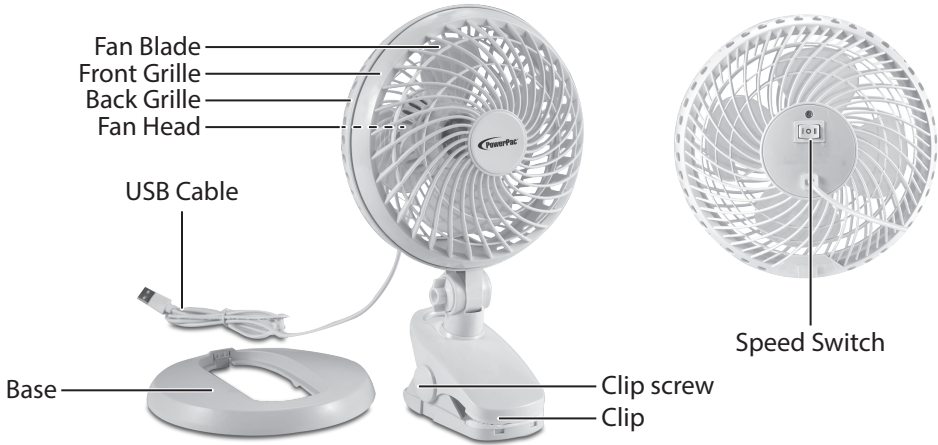

WARNINGS

ATTENTION :

Read this booklet carefully as it contains important instructions for a safe installation, use and maintenance. Important instructions to be kept for future reference.

The following basic precautions should always be followed when using electrical appliances:

1. Read all instructions before using the appliance.

The Appliance

2. This appliance must be used only for the purpose it was expressly designed; any use NOT complying with the instructions contained in the manual is considered inappropriate and dangerous. The manufacturer is NOT responsible for possible damages caused by the inappropriate and/or unreasonable use.
3. The installation/assembly of the appliance will be made in accordance with the indications of the manufacturer. A wrong procedure may cause damages to persons, animals or objects, for which the manufacturer cannot be considered responsible.
4. Before use, check the integrity of the appliance and USB cable. DO NOT operate the appliance when its housing is damaged. In case you are not sure, contact a qualified person. If the USB cable is damaged, it must be replaced by the manufacturer or its service agent, or a qualified technician in order to avoid a shock hazard.
5. Before powering the appliance make sure the rating (voltage and frequency) corresponding to the grid and the socket is suitable for the USB charging cable (DC 5 V 1.2 Amp) of the appliance, and that the wall socket is properly grounded.

6. Only use original components & accessories provided by the manufacturer. Any non-original component or accessory NOT recommended by the manufacturer (including, but not limited to, Front & Back Grilles, Fan Blade, Base Feet, USB Cable, etc.) made by other manufacturers or by the same manufacturer but for other models of the same capacity or otherwise may cause injuries to persons or damage to the appliance.
7. The packing materials (plastic bags, expanded polystyrene, etc.) must be kept out of the reach of children or disabled persons since they represent potential sources of danger.

Location

8. This appliance is NOT suitable to be used or stored near heat sources (open flame, ovens, heaters, stoves, etc.) and/or in an explosive environment (in the presence of flammable substances such as gas, vapour, mist or dust, in atmospheric conditions when, after ignition, the combustion is spread in the air). Items containing these substances should never be placed in the appliance, and never be used to clean the appliance in order to avert the risk of fire or explosion.
9. Place the appliance at a proper distance from objects or surrounding walls making sure that its functioning will NOT cause accidental damages. There should be at least 20 cm of free space from the back, left & right sides, and the top of the appliance. Never put things on top of the appliance.
10. Avoid placing the USB cable on abrasive or sharp surfaces or in positions where it can be damaged easily. Avoid placing heavy objects on the cable. The cable must NOT be placed under carpets, or covered with throw rugs, runners or similar. Arrange the cable away from the high traffic area, and where it will NOT be tripped over. DO NOT pull, drag, tug or carry the appliance by the cable.
11. DO NOT operate the fan next to an open window while it is raining. Rainwater splashing onto the fan may cause an electric shock.
12. DO NOT use or store the appliance outdoors. Store and use the appliance only indoors, or in any case, protected from weathering such as rain, direct radiation of the sun and dust.

Operation

13. If you are using the appliance for the first time, you should:
 - a. Clean the exterior parts of the fan with warm water & dish-washing agent with a soft cloth and wipe dry. DO NOT use metal scouring pads. Make sure that the Motor Unit DOES NOT come into contact with water.
 - b. Assemble the appliance fully and check that the Fan Grilles and Fan Blades are NOT damaged.
 - c. Ensure that the Main Body screw is fully tightened.
 - d. (Clip Fan) Clip the fan to a stable and dry surface.
(Table Fan) Insert the Clip into the Base placed on a stable, horizontal surface.
 - e. To turn ON : Press the Speed Switch to '0' (OFF). Insert the USB cable's Type-A plug into the socket of the charging device. Set the Speed Switch to 'I' or 'II'.
 - f. To adjust the angle of the fan, tilt the Front Grille forwards or backwards, or side to side.
 - g. To turn OFF : Set the Speed Switch to '0' (OFF).
 - h. Make sure to remove any label or protective sheet which may prevent its proper functioning.

DO NOT:

- cover the appliance during functioning;
- obstruct totally nor partially the Air Inlet & Air Outlet;
- insert objects or body parts (including clothing and hair) inside the protection cover of the appliance to avoid personal injury or damage to the appliance when the appliance is in operation;
- attempt to force the fan blades to turn or stop the blades from turning, which may lead to the motor overheating. If the motor is operating, but the Fan Blades do not move, switch the appliance off;
- touch the inside of the fan while it is operating. The blades are rotating at very high speeds, which may lead to injury to your fingers and hands;
- push the Speed Switch too forcefully;
- use the appliance near curtains or textiles;
- use the appliance to dry wet clothes or use the appliance in a damp environment;
- use any of the following agents as a cleaner: gasoline, thinner, or benzene;

- operate the appliance for more than 2 hours without turning it off for at least 20 minutes to let the appliance cool down for a total usage of 6 hours a day – failure to heed this warning may result in motor failure;
 - leave the appliance unsupervised during operation.
14. During operation, DO NOT touch the appliance with wet body parts, and it is recommended to have between you and the standing surface, an isolating element (for example, wearing shoes with rubber soles).
 15. DO NOT soak the Motor Unit in water or other liquids, wash it under the tap, or let any liquid flow into the internal casing of the appliance to prevent electric shock. In case of accidental fall in water, DO NOT try to take it out, but first of all switch OFF the charging port of the external charger or computer immediately.
 16. Switch the appliance OFF before unplugging the appliance. Plug and unplug the USB cable firmly holding it with dry hands. Always unplug the USB cable to avoid overheating and if it is NOT used for a long period, before storing, assembling & disassembling, cleaning or performing any maintenance operation. Before storing, cleaning or performing any maintenance operation, leave to cool for at least 30 minutes.
 17. In case of malfunction or anomaly during the functioning, switch the appliance OFF immediately, turn off the power and check the cause of the anomaly, if possible, with the support of a qualified person.
 18. If smoke is observed coming out of the appliance, switch the appliance OFF & detach the Type-A plug of the USB power cable from the charging port of the external charger or computer immediately.
 19. This appliance is NOT intended for commercial use but to be used in households and similar applications, such as:
 - Staff kitchen areas in shops, offices and other working environments;
 - By clients in dormitories, hotels, motels and other residential environments;
 - Bed and breakfast type environments.
 20. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall NOT play with the appliance. Cleaning and user maintenance shall NOT be made by children unless they are older than 8 and supervised. Keep the appliance and its cable out of reach of children less than 8 years old.
 21. Save these instructions.

SPECIFICATION

MODEL	VOLTAGE	POWER
PPUF221	DC5V	3W

HOW TO USE

Clip Fan

1. Clip the Fan to a stable and dry surface. Damage may occur if the appliance is clipped on a movable, unstable, slippery or wet surface.

Table Fan

2. Insert the Fan into the Base placed on a stable, horizontal surface.



To turn ON

3. Press the Speed Switch to '0' (OFF).
4. Insert the USB cable's Type-A plug into the socket of the charging device. DO NOT use a USB socket if it does not fit the USB Type-A plug snugly!
5. Set the Speed Switch to 'I' (Low) or 'II' (High).
6. Tilt the Fan Head or Front Grille upwards or downwards, or sideways, to the desired position to adjust the angle of the fan.



To turn OFF

7. Set the Speed Switch to '0' (OFF).
8. Detach the USB cable's Type-A plug from the socket of the charging device.

HOW TO CLEAN

1. Switch the appliance OFF. Wait for the appliance to cool down completely.
2. DO NOT attempt to disassemble the appliance. Warranty will be voided in such instances.
3. The Front Grille detaches from the rest of the appliance. Clean the exterior parts of the fan with warm water & dish-washing agent with a soft cloth, and immediately wipe dry. Make sure that the Motor Unit DOES NOT come into contact with water. Please exercise caution when cleaning around the grilles. DO NOT use a scrubbing brush. DO NOT use any of the following agents as a cleaner: gasoline, thinner, or benzene.
4. Never run water over the appliance as malfunctions may occur if water seeps inside the appliance.
5. Use a vacuum cleaner to suck up dirt from the Air Inlet and Air Outlet and around the Motor Unit periodically, based on the frequency of use and the air quality of the environment.

Press the clip
inwards to detach
the Front Grille



Press the clip
inwards to detach
the Front Grille

Dust (including smoke residue, hair, fur/feathers from pets, fibres from clothes, towels, curtains and carpets, etc.) can collect on the Grills, Fan blades and inside the Motor Unit. If not removed, it can build-up over months or years. During normal operation, the Motor will become hot and this is normal. If not removed, dust can be a fire hazard.

ENVIRONMENTAL TIP

This appliance, along with all other electronic appliances, should, when it is no longer capable of functioning, be disposed with the least possible environmental damage according to the local regulations in your area. In most cases you can discard the appliance at your local recycling centre.

DISPOSAL: Do not dispose this appliance as unsorted municipal waste.

Collection of such waste separately for special treatment is necessary.

Risk of child or animal entrapment

Before you discard this appliance, please remove all doors and leave the shelves inside so that children or animals may not easily get trapped inside.

WARRANTY

Warranty Conditions

1. This warranty provides against defective materials and manufacturing faults throughout for two years from the date of purchase of the appliance. The warranty on the Compressor is 10 years subject to the same conditions as above.
2. This warranty also does not cover normal wear and tear, replacement of consumable materials and accessories, and the cost of maintenance of the appliance.
3. This warranty does not cover the repair or replacement of part/s damaged by misuse, accidents, negligence, alterations, or modifications in any way, or repairs done by any repair organisation without the prior consent of PowerPac Electrical Pte Ltd.
4. Repair and service are to be performed at: 5 Changi South Lane #03-01 Singapore 486045. A transport fee will be charged for personal doorstep service.
5. The original purchaser of the appliance must furnish proof of purchase to our Service Centre with the email or number as registered during submission of warranty when this appliance is sent for repair/service. Failure to do so may delay the receipt of said repair/service by the customer.
6. Under no circumstances whatsoever shall the serial number be erased, defaced or altered by the customer and/or his representatives, or the dealer and/or his agents. Failure to ensure this shall invalidate the warranty.
7. This warranty is deemed to be void if the defect is caused by the attack of household pests, fire, lightning, natural disasters, pollution, abnormal voltage or the usage of generators.
8. This warranty is valid in Singapore only.
9. This warranty will be honoured subject to the customer's registration of the warranty inclusive of original invoice or valid purchase receipt. Failure to present these documents will result in denial of service. However, if the customer still requests that the defective appliance be repaired, PowerPac Electrical Pte Ltd may, at its discretion, repair the appliance but impose a labour charge, as well as the costs of the replacement parts, to be borne solely by the customer.
10. Please refer to the attached picture for the location of one of our appliance's serial number, as an example.

Please complete the on-line registration warranty form available on our website. There is no further requirement to send us any hard copy as part of our efforts to save the environment. In accordance with the terms and conditions of this limited warranty as stated above, PowerPac Electrical Pte Ltd, at its expense shall provide free services for the appliance within the warranty period from its date of purchase from our Authorised dealers.



E-Register scan





*Thank
you!*
*for your
purchase*

CODE
THANKYOU15

WE ARE OFFERING A
**15% OFF STOREWIDE FOR
YOUR NEXT PURCHASE AT
WWW.POWERPAC.COM.SG**



TERMS AND CONDITIONS

One time usage with minimum spend of \$30

This promo code is valid within 3 months for purchases made through powerpac.com.sg
This promo code cannot be applied with any promotions, offers and privileges, unless otherwise stated.*

*We reserve the right to modify, cancel and limit any promotion or offer.
In case of any dispute, our company reserves the rights of final and conclusive decision.

THIS IS HOME TRULY

E Warranty Registration

Please complete the on-line registration warranty form below. There is no further requirement to send us any hard copy as part of our efforts to save the environment.


In accordance with the terms and conditions of this limited warranty as stated below, PowerPac Electrical Pte Ltd, at its expense shall provide free services for the appliance within the warranty period from its date of purchase from our Authorised dealers.

This warranty will be honoured subject to the customer's registration of the warranty inclusive of original invoice or valid purchase receipt. Failure to present these documents will result in denial of service. However, if the customer still requests that the defective appliance be repaired, PowerPac Electrical Pte Ltd may, at its discretion, repair the appliance but impose a labour charge, as well as the costs of the replacement parts, to be borne solely by the customer

E-Register scan



Product Serial No

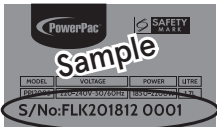

Refer rating label at bottom of product



follow us on
face book

PowerPacSG 



follow us on
tiktok

@powerpacsg 



Tanah Merah Stn Exit B »» Bus No. 2/9/48(Stop ID: 85091)
»» 5 min (4 stops) »» Bef Changi Fire Stn (Stop ID: 85071)
»» Walk About 6 min, 500m



Simei MRT »» Bus No. 9 (Stop ID: 85079)»» 6 min (3 stops)
»» Flextronic (Stop ID: 96161) »» Walk About 6 min, 500m

OFFICE / SERVICE CENTER

PowerPac Electrical Pte Ltd

Tel: 6214 9555

Address: 5 Changi South Lane, #03-01 S(486045)